


The Tesloid Tent

Quick Start Guide




For any questions, please email contact@tesloid.com


Contents

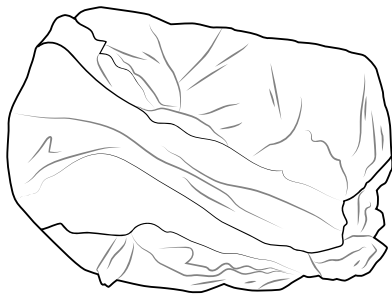


Tent X 1 2

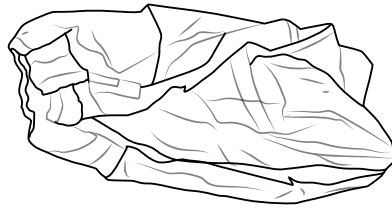


Rain Fly x 1

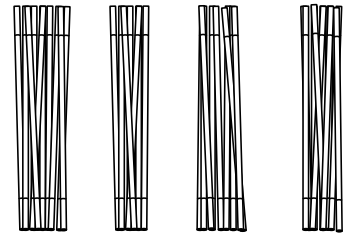

Arching Wall Support Poles x 5 (1 spare)

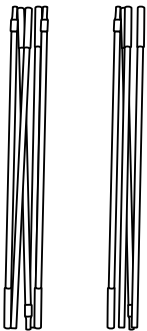


Roof Support Poles x 2

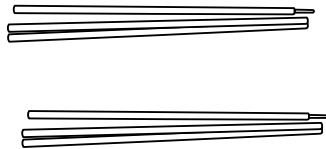

Awning Support Poles x 2





Stakes & Rope

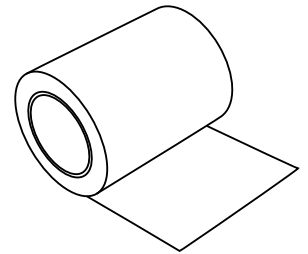


Tent Repair Tape

Step 1

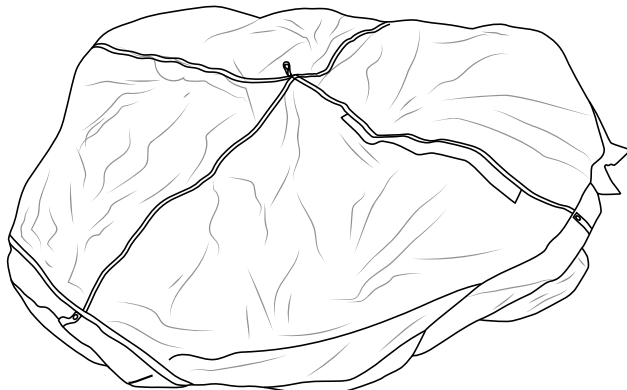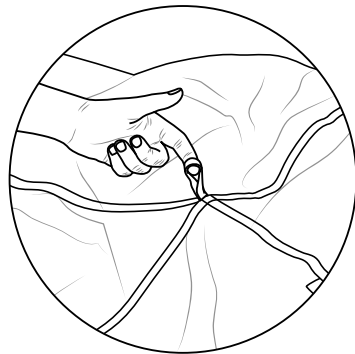


Unpack tent with the top side facing up. Locate center red loop.

Step 2

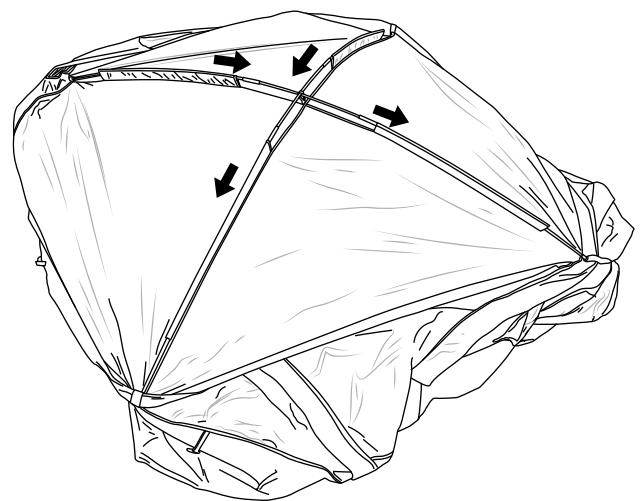

Assemble 'Roof Support Poles' into a long straight pole and push each pole through the loop channels forming a cross. Insert the ends of the poles into metal ringed holes to create a roof dome.

Step 3

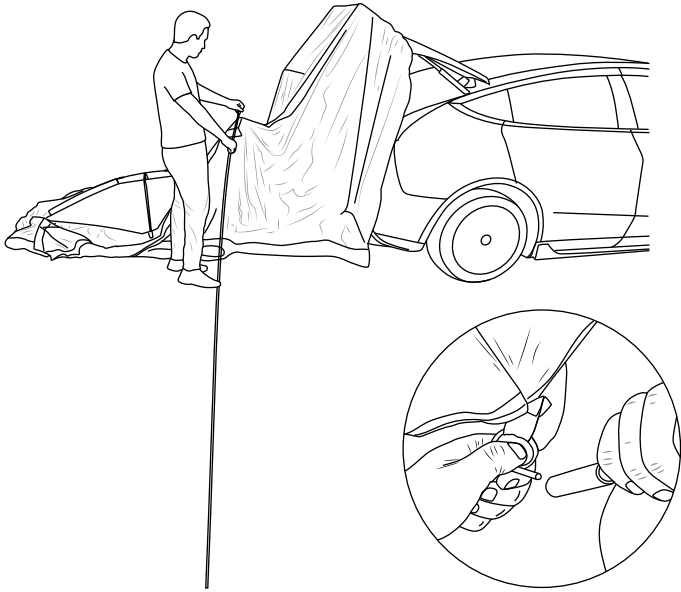

Assemble 'Arching Wall Support Poles' into a long straight line and push them through the looped channels along one side of the wall. Insert the ends of the pole into the pin at the base of the tent to form an arch. Tip: Start with side that docks with the car as it helps keep the tent upright.

Step 4




Repeat for all remaining sides until all of the four walls are upright forming arches on each side.

Step 5




Adjust and align the tent with Model Y. Pull the elastic end over to encapsulate the rear end of the Model Y and secure the buckles that run along the elastic end.

Step 6

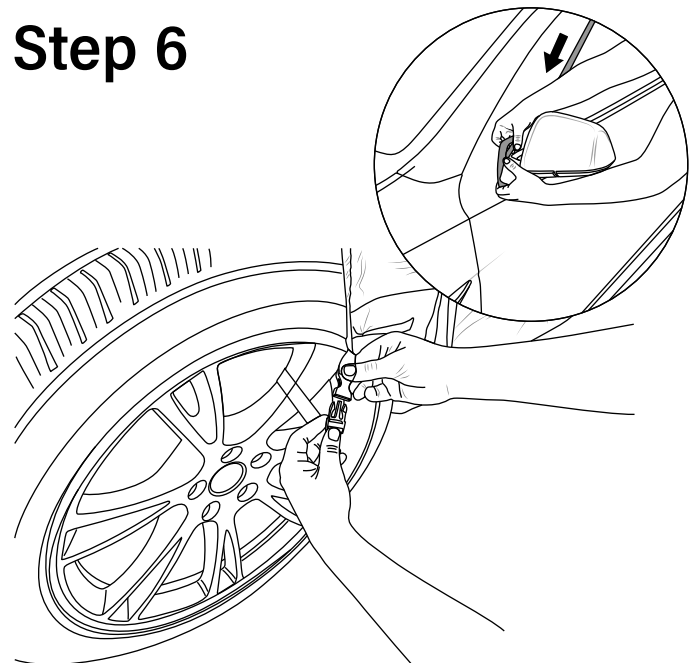


Secure the buckles closest to rear wheel into the rims. Extend glass roof extension cover and secure it with the rear view mirrors. Close the gap next to the rear doors with the help of embedded magnets.

Step 7

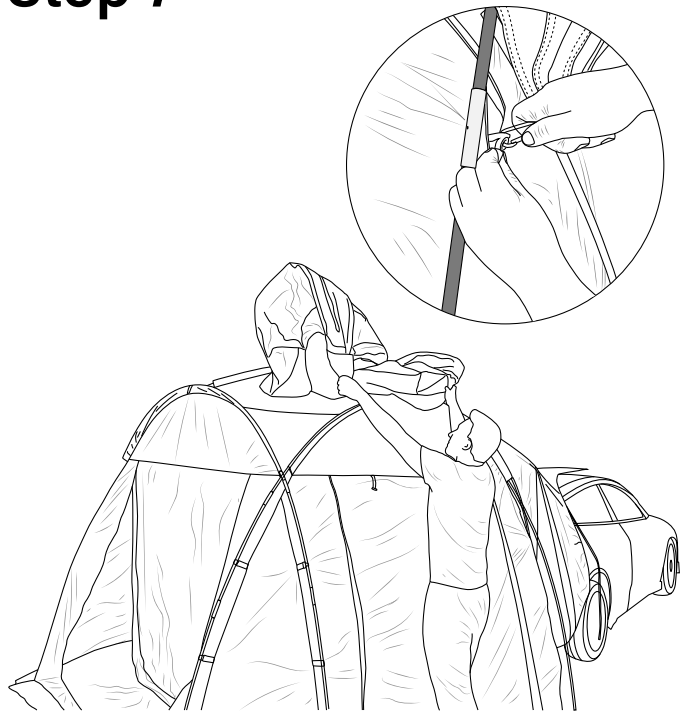

Spread Rain Fly over the tent and secure the carabiner clips on the ends.


Step 8

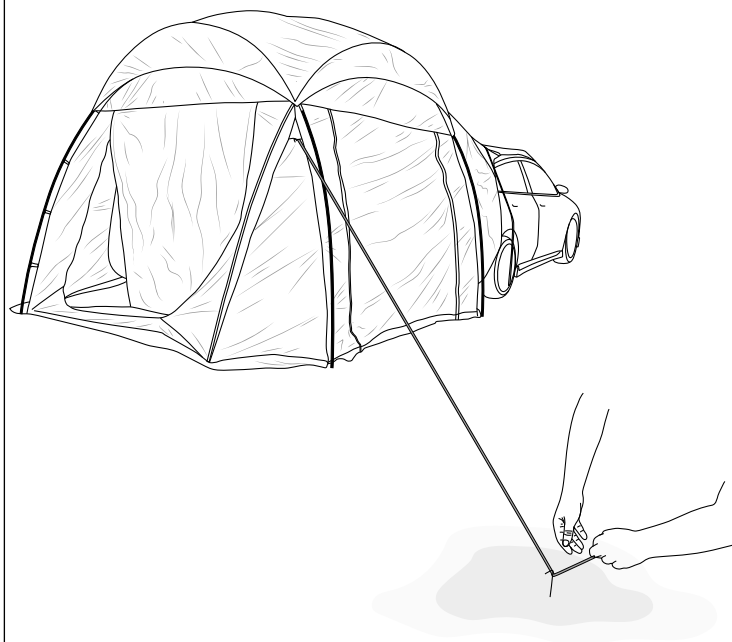

Secure each corner of the tent against wind using the provided tension rope and stakes.

Step 9

Assemble 'Awning Support Poles' into long straight poles. Stick the pointy end through the metal ringed holes and use tension rope and stakes to hold the poles upright.

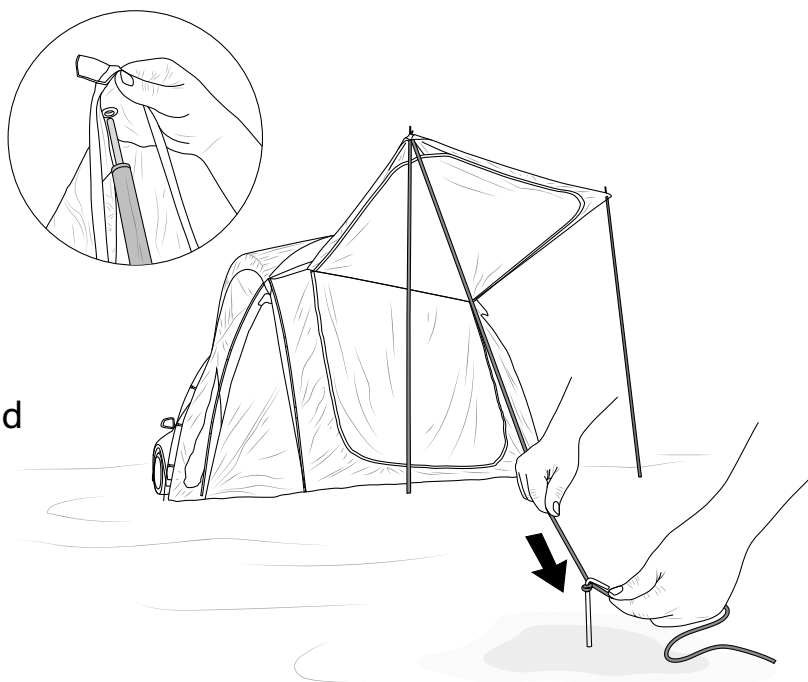

- Caution: Ends of the tent contain very strong magnets. Always take extra precaution to prevent damage to the paint of the car.
- Caution: Glass roof may crack when lowering trunk hatch door while jammed. Always check to make sure hatch door sill is fully clear before lowering the trunk hatch door.
- Caution: Tent may leak rain water. Always use Rain Fly to guard against rain.
- Caution: Tent may collapse under high wind. Always use provided tension rope and stakes to guard against wind.